



EN

## EVAPORATIVE AIR COOLER

Husky









## OPERATING INSTRUCTIONS


Read the instructions carefully before operating the appliance or carrying out maintenance operations.  
Observe all the safety instructions; failure to observe the instructions may lead to accidents and/or damage.  
Keep these instructions in a safe place for future reference.

## GENERAL SAFETY INFORMATION

- Only use this appliance as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Make sure that the type of mains power complies with the electrical requirements of the appliance (230 V~ /50 Hz).
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with it.
- This product can be used by children of 8 years of age and upwards, and by persons with reduced physical, sensorial and mental capacity, or who are not familiar with its operation, under the supervision or instruction of a person responsible for their safety, so that they are fully aware of the attendant risks.
- Disconnect the mains power when the appliance is not in use or during cleaning operations.

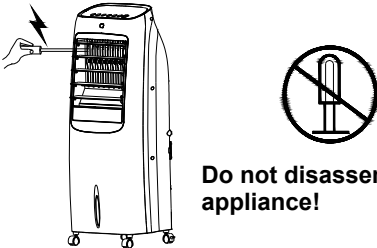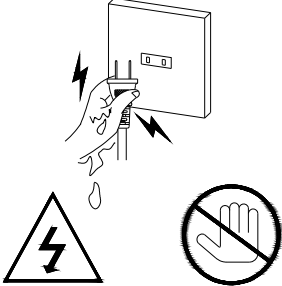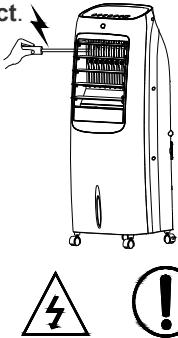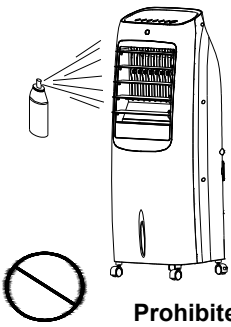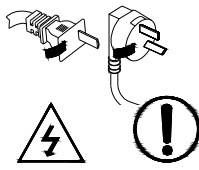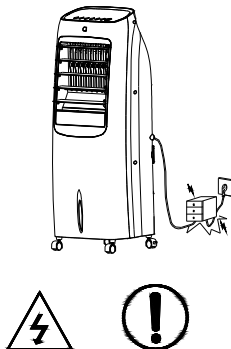
<p><b>In the event of any problems, switch off the appliance immediately, do not attempt to repair it, and take it to your local After-Sales Service Centre.</b></p> <p><b>Do not remove or replace individual parts, as this could affect product safety.</b></p>  <p><b>Do not disassemble the appliance!</b></p>	<p><b>Do not touch the power cord with wet or damp hands; risk of electric shock.</b></p>  <p><b>Warning!!! Do not touch</b> <b>Risk of electric shock!</b></p>
<p><b>Do not insert objects into the appliance grilles.</b></p> <p><b>This could cause leaks, short-circuits and damage to the product.</b></p>  <p><b>Warning!!! Do not touch</b> <b>Risk of electric shock!</b></p>	<p><b>Do not spray flammable substances or pesticides near the product as they could damage it.</b></p>  <p><b>Prohibited!</b></p>
<p><b>Do not use the appliance if the cord or plug is damaged. Do not attempt to change the power cord yourself. If the power cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.</b></p>  <p><b>Warning!!! Do not touch</b> <b>Risk of electric shock!</b></p>	<p><b>Do not bend or stand heavy objects on the power cord.</b></p>  <p><b>Warning!!! Do not touch</b> <b>Risk of electric shock!</b></p>

Turn the switch off and unplug before carrying out any maintenance work or moving the appliance. Always unplug from the socket when the appliance is not in use.

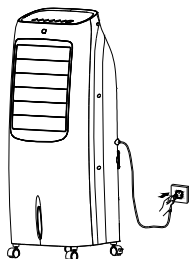


**Compulsory!**

To disconnect the appliance, press the OFF button and unplug from the socket. Only pull on the plug. Do not pull the cord. Otherwise the cable may be damaged or leaks, etc. may occur

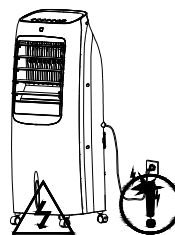


**Warning!!! Do not touch**  
**Risk of electric shock!**

Do not pour water over the product: risk of short-circuits and damage to the product.

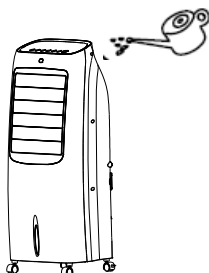



**Warning!!! Do not touch**  
**Risk of electric shock!**

Do not leave the airflow directed towards children for long periods of time: it is not good for their health

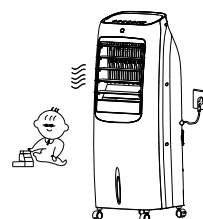

**Prohibited!**

## DESCRIPTION OF PARTS

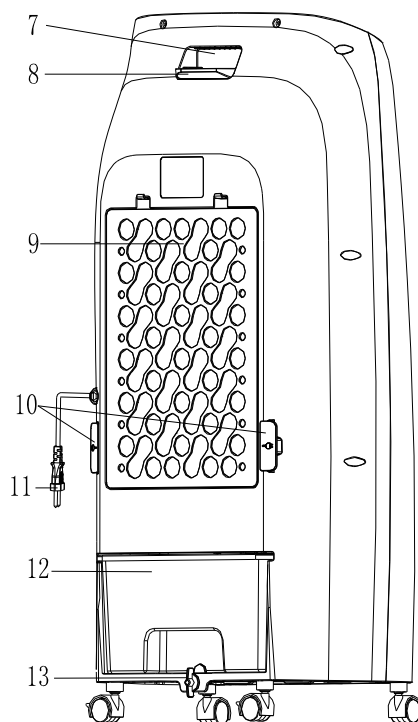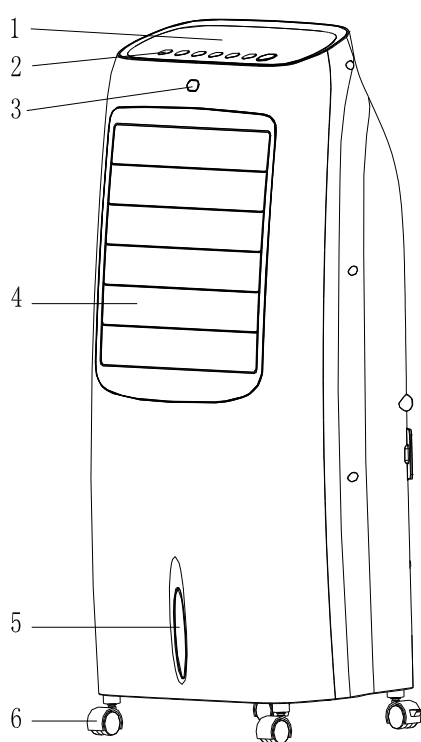

1. Display
2. Buttons
3. Signal receiver
4. Frontal flaps
5. Water tank level indicator
6. Multidirectional wheels (the rear ones brake)

7. Handle
8. Remote control compartment
9. Opening for evaporative panel with dust filter
10. Cord storage
11. Power cord
12. Water tank
13. Tank block

## HOW TO USE THE APPLIANCE

The appliance does not need to be installed.


Position the unit on a flat, stable surface and connect the power cord to a suitable power socket (230 V~): you will hear a sound to indicate that the appliance is in standby and can be switched on using the START/SPEED button. Pressing the OFF button, the unit will beep and turn off.

When you move the appliance, use the handle on the rear. Do not use this air cooler in a dust and high humid area or in an area with a temperature above 40°C.

This product can be used either as a fan, with 3 modes (Normal, Natural and Sleep) and 3 fan speed options (low, medium and high), or as a cooler/humidifier: in this case the rear tank should be filled with demineralized water, up to but not exceeding the maximum level as indicated. When the water in the tank falls below the minimum level (marked on the tank), the appliance emits a continuous sound for 10" to signal a low water level, then cooling mode is stopped. The unit automatically shuts down when the tank is removed.



The fan takes in air from the room and passes it through the dust filter and the evaporative panel, which is constantly humidified thanks to a system which draws water from the tank and sprays it onto the panel. The incoming hot air makes part of the water contained in the panel evaporate and is therefore cooler when released back into the room, which makes it feel as though the temperature has dropped.
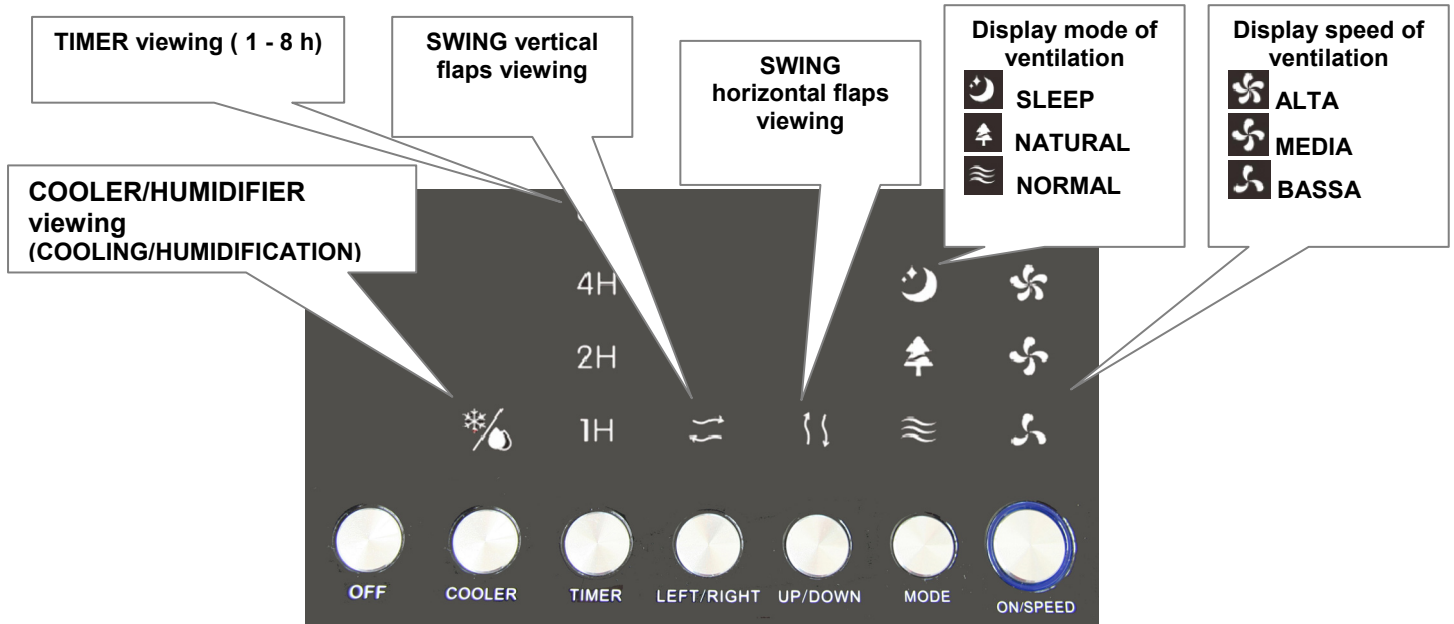
## CONTROL PANEL and AVAILABLE FUNCTIONS



**START/SPEED BUTTON:** When the appliance is off push the START/SPEED button to turn on the appliance and open the frontal flaps.

Here are the basic settings of the device:

- Ventilation in **NORMAL**  mode (constant fan speed);
- The frontal flaps are fixed to 127°;
- The indicator light **COOLER**  is off;
- The indicator lights **TIMER (1H, 2H, 4H, 8H)** are off because the timer is not set.

Press the START/SPEED button to select low , medium  and high .

### OFF BUTTON:

When the appliance is on, press this button to turn off the power. The frontal flaps will close.


 

### COOLER BUTTON (COOLING AND HUMIDIFICATION):

When you press this button the mode “Cooling/Humidification will activate. The correspondent LED will light.

### TIMER BUTTON:


Press this button to activate the timer operation for a period of time that goes from 1 to 8 hours: 1H, 2H, 4H and 8H. It deactivates by pressing the button until the time from the display is gone.

### MODE BUTTON: FAN MODE SELECTION (NORMAL, NATURAL, SLEEP).


Press this button once to switch from “Normal”  mode, activated by default when the START/SPEED button is pressed, to “Natural” . Press the button a second time to move to “Sleep”  mode.

In each of the 3 modes, it will then be possible to select the desired speed: High , Medium  or Low .


The “Natural” mode has 3 fan levels (1, 2, 3), each with different periods in which the high, medium and low speeds alternate, in order to create a very natural type of ventilation. An example of this is illustrated on the graph below.

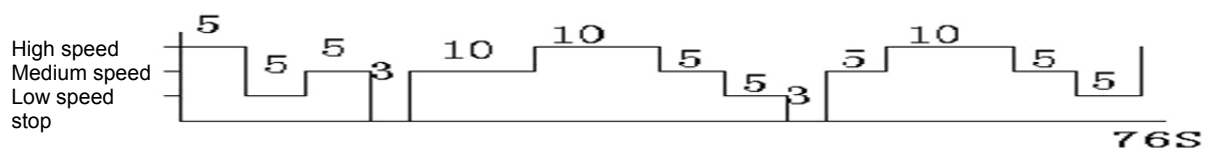

Level 3 – Natural mode at high speed 

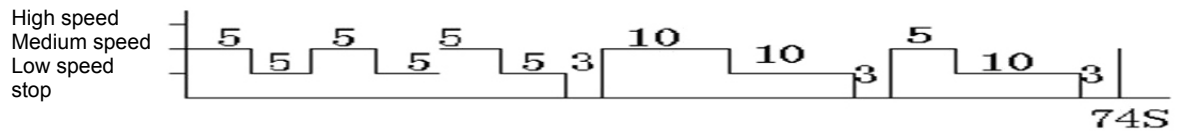

**Level 2 – Natural mode at medium speed** 

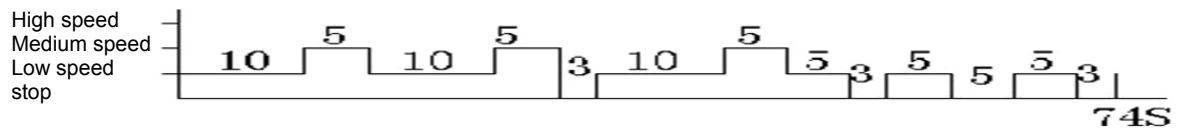


**Level 1 – Natural mode at low speed** 


The “**Sleep**” mode has 3 fan levels (1, 2, 3), each with different periods in which the high, medium and low speeds alternate in Natural mode, in order to create a very natural type of ventilation at night.

**Sleep mode - Level 3 (high)** : 30’ in Natural mode level 3 + 30’ in Natural mode level 2; then continues in Natural mode level 1.

**Sleep mode - Level 2 (medium)** : 30’ in Natural mode level 2, then continues in Natural mode level 1.

**Sleep mode - Level 1 (low)** : Natural mode level 1 only.

**LEFT/RIGHT BUTTON:** Press this button to swing the vertical flaps. The indicator light will illuminate . Press again to stop the flaps at the desired position.

**UP/DOWN BUTTON:** Press this button to swing the horizontal flaps. The indicator light will illuminate . Press again to stop the flaps at the desired position.


**MEMORY FUNCTION:** when the appliance turns off, the settings are maintained as they are set.

**COOLER, UP/DOWN, LEFT/RIGHT, MODE (except for the SLEEP mode), SPEED.**

**AUTORESTART FUNCTION:** in case of power failure, when the power is restored the unit makes an audible beep and closes its horizontal flaps, then it resets all settings of the **COOLER, UP/DOWN, LEFT/RIGHT, MODE and SPEED** buttons and the flaps will re-open.

## TELECOMANDO

The remote control has seven membrane buttons whose functions are identical to those on the control panel (already illustrated in detail).

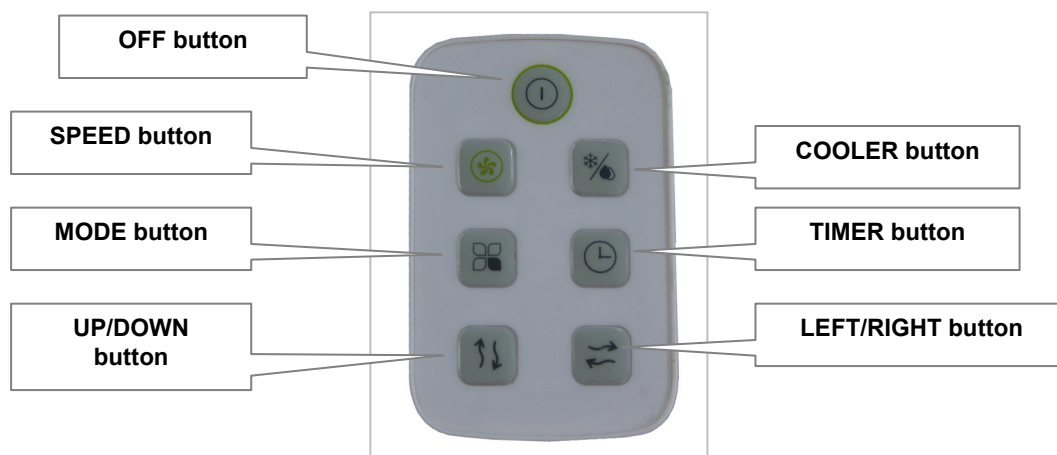



## HOW TO INSERT / REMOVE THE REMOTE CONTROL BATTERIES (refer to the diagram below)

Open the battery cover on the back of the remote control (press and pull the cover).

Place the battery inside the cover, making sure the polarity is correct.

Slot the cover back into position on the remote control.


Use Lithium/Manganese button cells, model no. CR2032 -3 V, compliant with Battery Directive no. 2006/66/EC (supplied with the remote control).

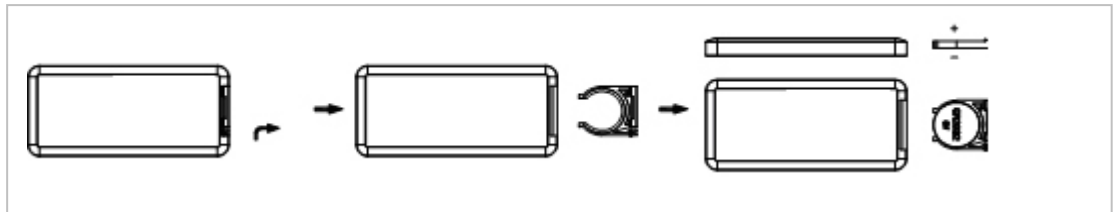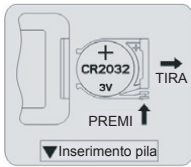

## INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2006/66/EC

Please replace the battery when its electrical charge has been exhausted: at the end of its useful life, it must not be disposed of together with unsorted waste. It must be delivered to appropriate separated waste disposal plants or to dealers that provide a similar service. Separate waste disposal of batteries prevents potential negative effects on the environment and human health resulting from inadequate disposal, and also allows the materials from which it is made to be recovered and recycled in order to achieve significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the battery. Illegal disposal of the product by the user shall result in the application of administrative sanctions as defined by current regulations.

## FILLING THE WATER TANK

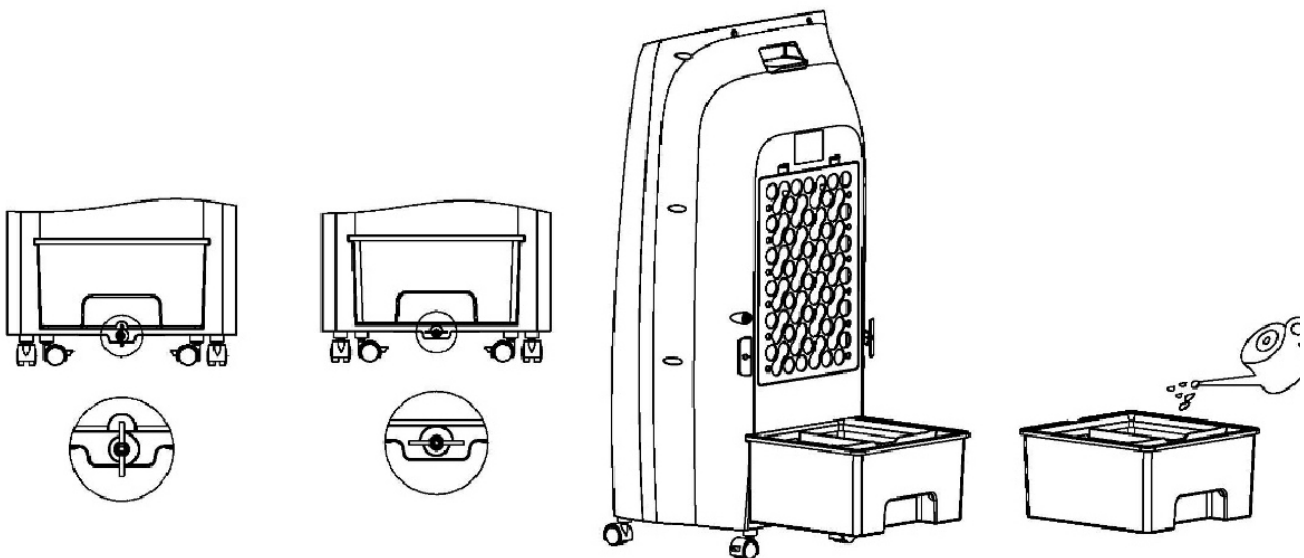

## THE TANK MUST BE FILLED WITH WATER FOR THE APPLIANCE TO OPERATE IN COOLER/HUMIDIFIER MODE.

Counter-rotate the tank knob by 90° and remove it from its slot; fill it with tap water, up to the maximum level mark. Reposition the tank and turn the knob.


If you wish to keep the water in the tank below room temperature in order to maximise cooling in warmer months, leave one of the two synthetic ice packs supplied in the freezer until solid, then add it to the water in the tank.

The ice will absorb heat from the water.

We recommend continuous use of the ice for optimal cooling capacity.

The first time it is used, you may detect a smell or the water may turn an unusual colour: this does not constitute a health risk.

When the tank is removed when the unit is in function, the power goes off, it makes a beep and the device stops working. Press the ON/SPEED button to restore the function. When the tank is empty for a few seconds the cooling function stops and only the ventilation works. The LED will turn off.

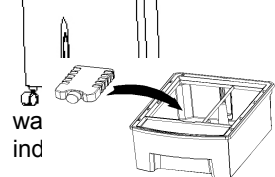

## MAINTENANCE AND STORAGE

**WARNING: ALWAYS UNPLUG THE APPLIANCE BEFORE CLEANING OR MAINTENANCE PROCEDURES.**

**IMPORTANT: DO NOT SUBMERGE THE PRODUCT IN WATER**

### Cleaning the outside surface of the appliance

Use a soft cloth to remove any dust from the product.

If this is not enough, use a soft cloth dampened with water and a mild detergent at a temperature not exceeding 50°C. Let the appliance dry completely before using it.


Do not use corrosive detergents or solvents such as petrol. Do not wash the appliance with water. Do not use oils, chemical substances or other items that may damage the surface to clean it.

Use a vacuum cleaner to remove dust from the air inlet/outlet grilles.

### Cleaning the dust filter, the cooling panel and the tank

Clean the dust filter frequently, at least once a month.

Remove the dust filter by pulling the knob on the cooling panel, as indicated in the diagram below.

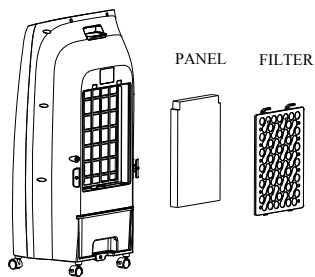

Clean the dust filter using a soft brush or a vacuum cleaner, and wash it in a solution of water and mild detergent.

Remove the cooling panel at the same time and soak it in a solution of water and mild detergent.

Take out the tank and rinse it under running water, removing any residue.

Let the filter, the panel and the tank dry completely after washing them; then re-fit the components in the following order: water tank, cooling panel and dust filter.

### STORAGE

If the appliance is not used for prolonged periods, disconnect the power cord and store the appliance with this manual in its original packaging, in a cool and dry place.



### INFORMATION FOR THE CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2012/19/EU

This appliance may not be scrapped with domestic waste at the end of its life cycle. We call your attention to the crucial role played by the consumer in the re-use, recycling and other forms of recovery of such waste.

The appliance must be scrapped by a sorted waste disposal centre or by returning it to the retailer (no charge is levied for this service), when you purchase a new equivalent appliance.

Sorted disposal of electric and electronic equipment prevents the negative effects on the environment and human health resulting from improper scrapping, and also allows the materials from which it is made to be recovered and recycled, with significant savings in terms of energy and resources.

The sorted disposal requirement is indicated by the crossed waste bin label affixed to the appliance.



[www.argoclima.com](http://www.argoclima.com)