



EN

PORTABLE AIR CONDITIONER (LOCAL)

Glamour



OPERATING INSTRUCTIONS

Read the instructions carefully before operating the appliance or carrying out maintenance work. Observe all the safety instructions; failure to observe the instructions may lead to accidents and/or damage. Store these instructions in a safe place for future reference.

GENERAL OPERATING AND SAFETY INSTRUCTIONS

- This appliance is a portable air conditioner designed for domestic use.
- Only use this air conditioner as described in this manual.
- Ensure that the required voltage and frequency (220-240V / 50Hz) match the available power source.
- This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Ensure that the electrical system is able to deliver the operating current required by the air conditioner, in addition to that normally absorbed by other appliances (electrical appliances, lighting system, etc.). Please refer to the maximum power input data shown on the air conditioner's data plate.
- Connection to the electricity grid must take place in accordance with current installation standards.
- Ensure that the automatic switches and system protection valves are able to withstand a start-up current of 6A (normally for less than 1 second).
- The power socket must always include an efficient earth connection.
- Make sure the plug is inserted fully. Do not use multiple adapters. Do not touch the plug with wet hands. Make sure that the plug is clean.
- Do not use the plug as a means by which to start/stop the air conditioner: use the ON/OFF button on the remote control or on the control panel.

- Do not install the air conditioner in rooms that may be subject to water spray (e.g. laundries).
- This air conditioner can be used by children of 8 years or older and by persons with reduced physical, sensory and mental abilities, or lacking the necessary experience and knowledge, provided they are supervised or instructed on its use by a person responsible for their safety, so that they are fully aware of the attendant risks.
- Before moving or cleaning the appliance, ensure that it is unplugged from the socket.
- Do not move the air conditioner while it is operating; first turn the appliance off, then check and remove any condensate which may have formed.
- To turn the appliance off, set the remote control to OFF and remove the plug from the socket. Pull on the plug only. Do not pull the cord.
- **Do not use the appliance if the cord or plug are damaged.** Contact a service centre to replace a damaged power cord, so as to avoid any safety risks.

PRECAUTION!

- **Do not insert any objects into the air conditioner: this is very dangerous as the fan turns at high speed.**
- **Ensure that air circulates freely around the unit. Do not cover the air intake and delivery grilles with drapes or any other means.**

WARNING!

- The air conditioner must be positioned **at least 50 cm** from the wall or any other obstacles, on a flat and stable surface so as to avoid water leaks.
- **The air conditioner is fitted with a system for protecting the compressor from overload. This means that the compressor only starts 3 minutes after its previous stoppage.**

- **Please wait at least 3 minutes before starting the unit. This helps prevent the compressor from being damaged.**

WARNING!

In the event of an anomaly, switch the appliance off and unplug it from the socket. Do not dismantle or attempt to repair or modify the product. In the event of a malfunction, contact the service centre directly.


WARNING!

- **Do not expose the air conditioner to direct sunlight, as the colour of the materials may change; moreover, the appliance may overheat causing the protection mechanism to intervene and switch the appliance off.**
- **Do not use insecticides, oils, detergents or spray paints near the appliance; do not use aggressive chemical detergents to clean the casing, as this may damage the finish and colour.**
- **Close all open windows to maximise air conditioning efficiency.**

The manufacturer will not be held liable if safety and accident prevention rules are not observed.


DESCRIPTION OF THE APPLIANCE

FRONT VIEW

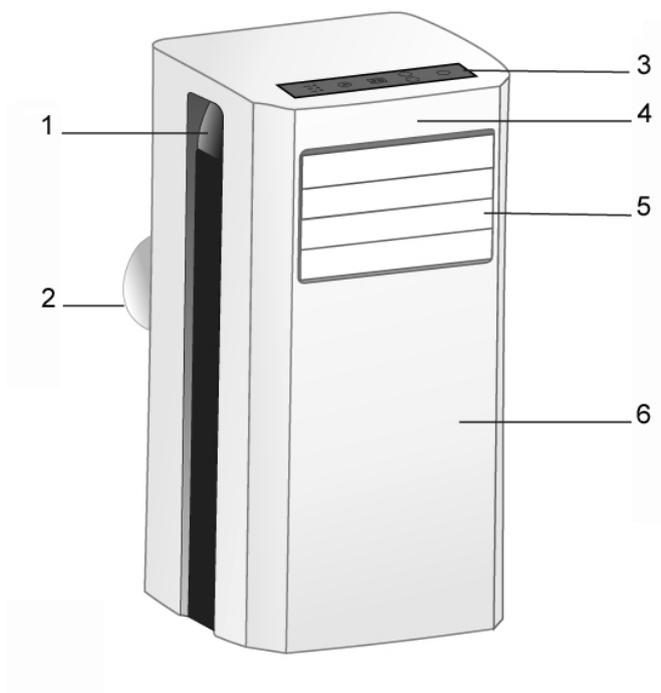

- 1) HANDLES
- 2) AIR OUTLET
- 3) CONTROL PANEL - BUTTONS FOR OPERATION WITHOUT REMOTE CONTROL
- 4) SIGNAL RECEIVER
- 5) FINS AND AIR FLOW OUTLET
- 6) FRONT
- 7) AIR INTAKE
- 8) CORD WINDING HOOK
- 9) DRAINAGE HOLE FOR DEHUMIDIFICATION FUNCTION
- 10) AIR INTAKE
- 11) DRAINAGE HOLE FOR COOLING FUNCTION
- 12) HANDLES
- 13) AIR OUTLET AND FITTING
- 14) POWER CORD OUTLET
- 15) SWIVEL CASTERS
- 16) REMOTE CONTROL

REAR VIEW

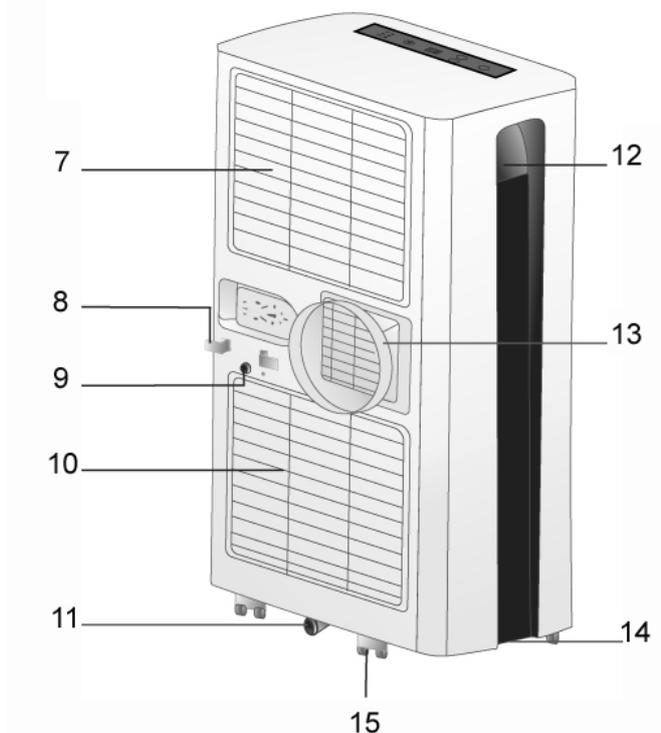

(16)

Min/max operating limits (internal temperature)

Cooling: 16 °C DB / 35 °C DB

Dehumidification: 16 °C DB / 35 °C DB

Cooling mode room temperature adjustment range: 16 °C DB / 32 °C DB

APPLIANCE START-UP

Open the packaging and pull out the box. Remove the product and the other elements supplied (illustrated in the box below).

Infrared remote control + button battery type (CR2032/3V)



Fitting (1) for positioning between the air discharge outlet and the flexible pipe.



Flexible pipe.



End fitting for window (2).



Window unit kit with plug.



Round fitting for window unit, for positioning between the end of the tube and the window unit itself.




Drainage tube (continuous drainage).



Position the product vertically on a flat and stable surface, as close as possible to a window and at least 50 cm from walls or other nearby obstacles.


USE WITH END FITTING FOR WINDOW

1. Connect the fitting (1) to the flexible pipe, extend the latter as far as necessary for reaching outside and connect it to the rear of the air conditioner.
2. Insert the flat fitting from right to left and secure it.

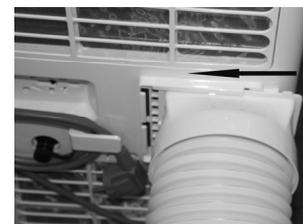


3. Connect the end part of the flexible pipe to the end fitting for the window (2).
4. Open the windows and lock one of the two leaves with the handle.

The drainage tube can be compressed to minimum 450 mm and extended to maximum 1500 mm. It is advisable to keep the tube compressed to the minimum.

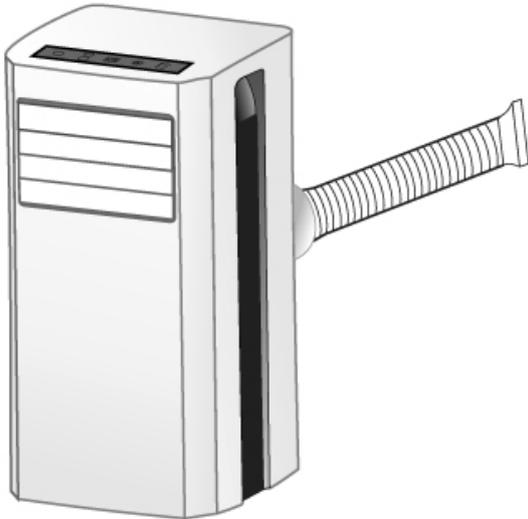



Rest the terminal connector against the fixed section of the window and move the other section up towards it.

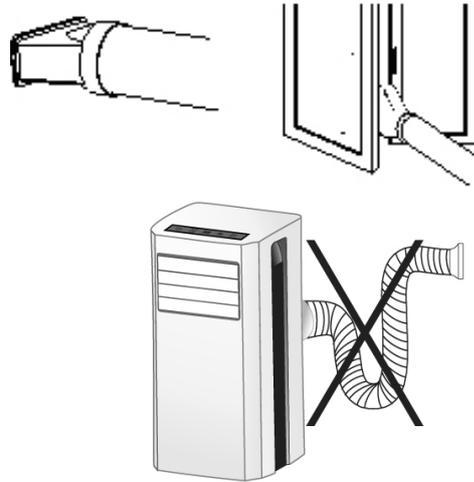

5. Avoid tight bends and folds in the flexible pipe.


USE WITH WINDOW UNIT KIT

1. Make a hole having a diameter of roughly 133 mm on the glass window.
2. Insert the window unit into the window.

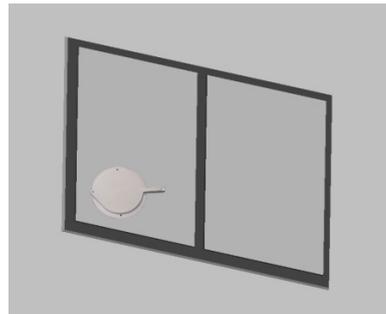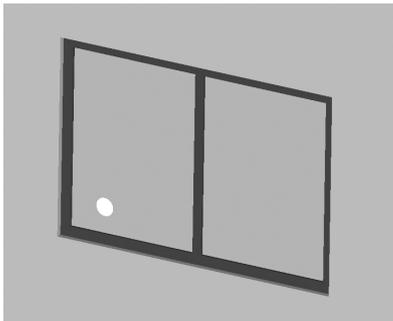

3. Insert the round fitting into the retractable flexible pipe and insert the latter with its round fitting into the window unit without the plug.

4. Insert the fitting onto the flexible pipe.

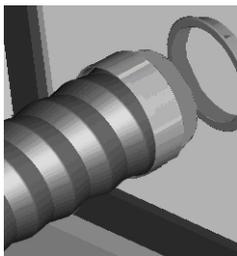

5. Insert the flexible pipe thus mounted into the rear of the air conditioner.




If the air conditioner is not used for prolonged periods, disconnect the pipe and plug the window unit. Connect the power cord to a suitable electric socket (220-240V). Insert the supplied batteries into the remote control and make sure the poles match. Select the desired operating mode from the remote control.

HOW TO USE THE APPLIANCE

This appliance can be used for cooling, dehumidifying and ventilation purposes.

When switching between modes, the fan continues operating but the compressor stops: the compressor will start again 3 minutes later. This delay protects the compressor from potential damage.

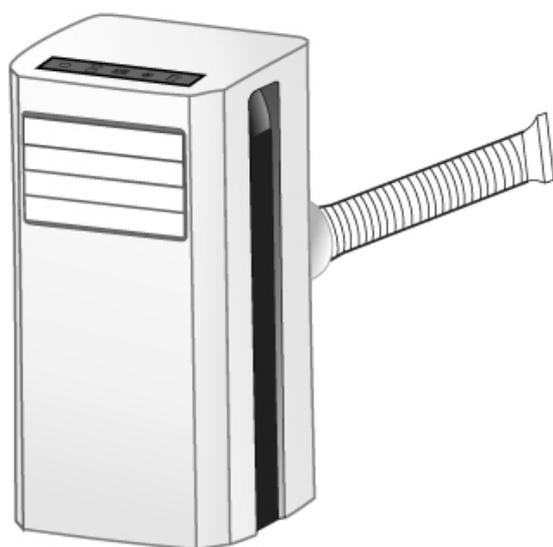

Cooling, Ventilation



Dehumidification

THE DRAINAGE TUBE MUST BE CONNECTED to the appliance AT ALL TIMES: the only exception is when the appliance is used in dehumidification mode only, in which case the appliance should be left to discharge directly into the room for maximum efficiency (see the “Dehumidification Mode” paragraph).

Clean the air filters under the easily removable rear grille regularly to keep the air conditioner working efficiently.

OPERATING MODES

1. COOLING MODE (COOL)

- The “Cool” LED on the control panel will turn on.
- The temperature can be adjusted to between 16 °C and 32 °C.
- In this mode, each time the ON/OFF button is pressed the unit switches off, the appliance saves the temperature setting and retains this setting when it is switched on again.
- In this mode, the fan speed can be adjusted and the Timer and SLEEP functions can be set.
- For more silent operation, run the fan at low speed.

2. DEHUMIDIFICATION MODE (DRY)

- Press the MODE button to select the dehumidification mode.
- The temperature is controlled by the electronic board and cannot be adjusted.
- In this mode, each time the ON/OFF button is pressed the unit switches off, the appliance saves the settings and retains them when it is switched on again.
- The fan speed is set to low and cannot be adjusted.

NOTE

The air conditioner does not cool the room when operating as a dehumidifier.

When the appliance is used as a dehumidifier, the flexible pipe must not be connected.

For maximum dehumidification efficiency, leave the rear discharge attachment free to discharge directly into the environment.

The dehumidification mode is recommended during autumn and winter.

If used during summer, it is best to leave the flexible pipe attached so that the hot air is discharged towards the outside rather than into the room.

During dehumidification, continuous drainage should be implemented (see the next chapter, “HOW TO ELIMINATE CONDENSATE”).

3. FAN ONLY MODE

- Press the MODE button until the Fan icon displays.
- In this mode, the fan speed can be set.
- The temperature cannot be regulated.

HOW TO ELIMINATE CONDENSATE

Cooling




This appliance automatically vaporises condensate in the cooling mode. Ensure that when the unit is operating in cooling mode, the rubber caps closing the drainage holes on the rear of the appliance are properly positioned. When the air conditioner operates in cooling mode, there is no need for continuous condensate drainage; only in specific weather conditions with very high air humidity levels may water deposit inside the unit. When the internal container is full, the display visualises message “P1” and the appliance stops functioning. To empty the container, switch the air conditioner off and unplug it. Remove the cap from the rear drainage hole and direct it over a normal drain. Ensure that the tube is not twisted or bent. The tube must slope downwards. Re-close the drainage hole with the cap and resume use of the air conditioner.

Dehumidification


WARNING!

When using the air conditioner in **dehumidification mode**, it is advisable to always arrange for **continuous drainage**, so as to maximise dehumidification efficiency. Connect one end of the PVC pipe provided to the rear discharge hole and place the other end above a drain.

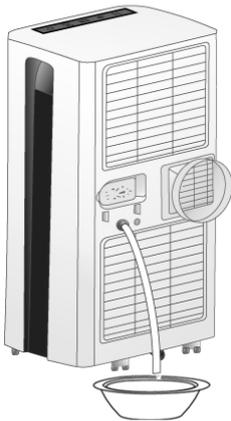

REMOTE CONTROL OPERATION

1. Slide to open the cover according to the direction indicated by the arrowhead.
2. Insert the batteries (CR2032/3V) into the remote control and make sure the poles match.
3. Put back the cover.
4. Aim the remote control towards the receiver on the air-conditioner.
5. The remote control should be within 8 meters away from the receiver.
6. No obstacles between the remote control and the receiver.
7. Do not drop or throw the remote control.
8. Do not put the remote control under the strong sun rays or heating devices and other heating sources as well.
9. Take the battery out of remote controller when you don't use it for a long time.
10. When the operation sound can not be heard indoor unit or the transmission symbol on the display screen does not flash, the battery need to be replaced.
11. If the rest phenomenon occurs when pressing the button of the remote control, the electrical quantity is deficient and the battery need to be replaced.
12. Waste batteries should be disposed of properly.

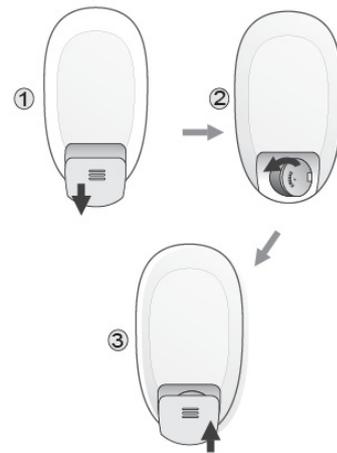

Note:


* The picture is general remote controller, contains almost all the function buttons. They may be slightly different from material object (depend on model).



INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2006/66/EC

Replace batteries when they are depleted. At the end of their life, batteries must be disposed of separately from unsorted waste. They must be taken to designated recycling centres or returned to a retailer providing this service. Separate waste disposal of batteries prevents potential negative effects on the environment and human health resulting from inadequate disposal, and also allows the materials from which it is made to be recovered and recycled in order to achieve significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the battery. Illegal disposal of the product by the user is subject to administrative penalties as per current regulations.

FOR OPTIMAL REMOTE CONTROL OPERATION, POINT THE TRANSMITTER HEAD TOWARDS THE RECEIVER ON THE AIR CONDITIONER.

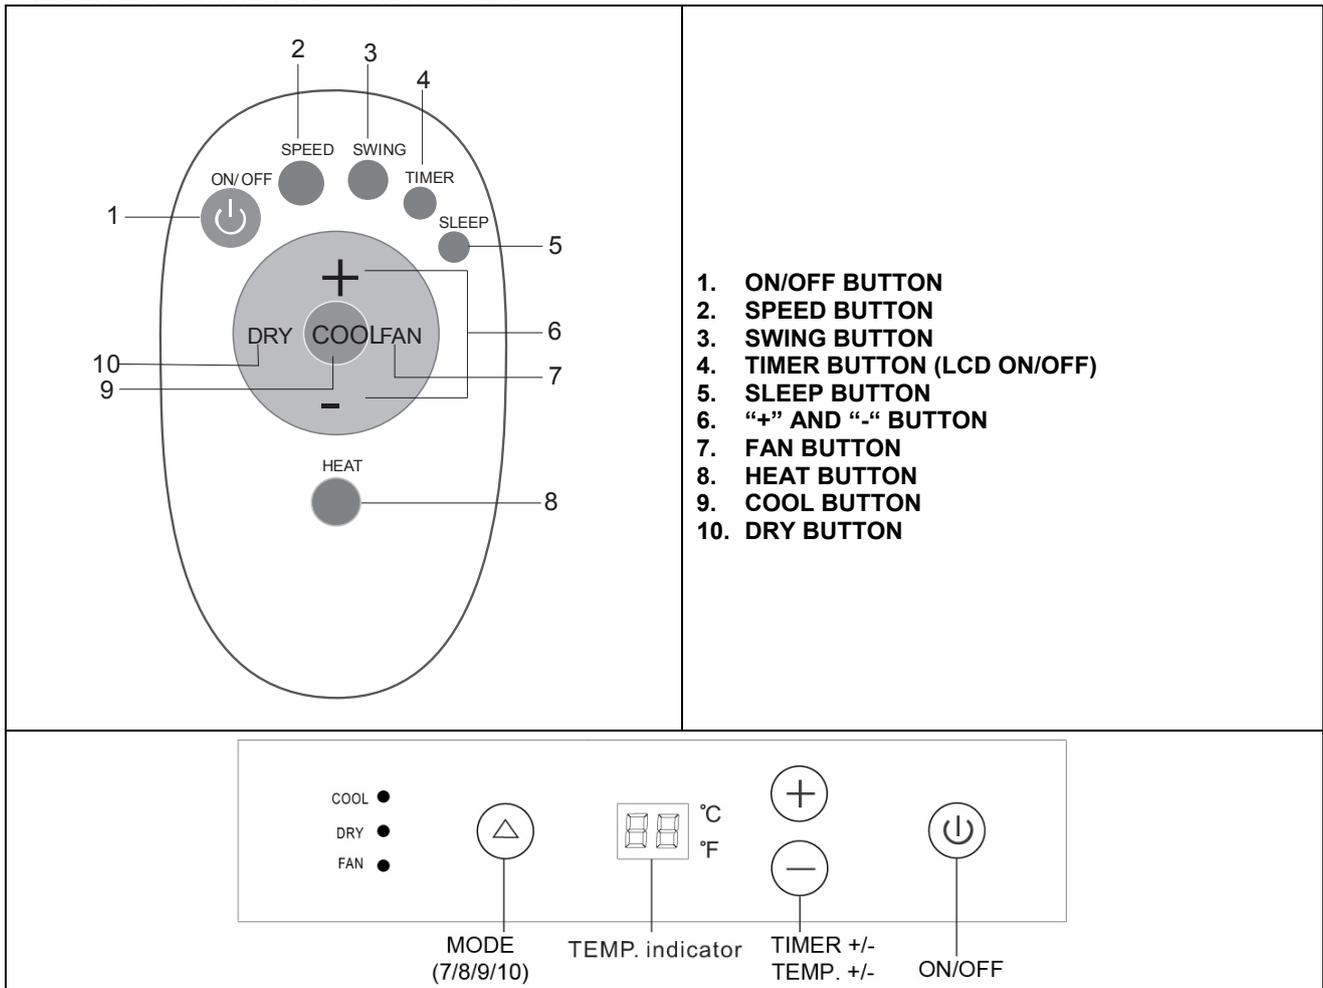

(1) "ON/OFF" BUTTON

Press the ON/OFF button to turn on or off the air conditioner.

(2) "SPEED" BUTTON

Press "SPEED" to set the wind speed (LOW, MID or HIGH).

(3) "SWING" BUTTON

Press "SWING" to turn on or off the swing function.

(4) "TIMER" BUTTON

a. When the air conditioner is turned off, press "TIMER" to set a time to turn on the air conditioner. Press "+" or "-" to set the time, and press "TIMER" again to confirm it.

b. When the air conditioner is turned on, press "TIMER" to set a time to turn off the air conditioner. Press "+" or "-" to set the time, and press "TIMER" again to confirm it.

c. After setting the time, press "TIMER" again to cancel the set time.

Note: After setting the time, press "TIMER" again to confirm it in 5 seconds. Without any operation in 5 seconds, the air conditioner will confirm the time automatically. Press "TIMER" after confirming the time will cancel the set time.

(5) "SLEEP" BUTTON

a. In operating mode, press "SLEEP" to enter the 10-hour intelligent sleep mode. After 10 hours, the air conditioner will exit the sleep mode and restore its previous mode.

b. In sleep mode, press "SLEEP" again, or press "MODE" or "ON/OFF" to exit the sleep mode.

Note: The sleep mode cannot be started in ventilation mode.

(6) "+" and "-" BUTTON

Press "+" or "-" to regulate the temperature (the unit is 1°C) and set the time (the unit is 1h). The temperature ranges from 16°C to 32°C, and the time ranges from 1h to 24h.

(7) “FAN” BUTTON

Press “FAN” to start the Ventilation mode.

(8) “HEAT” BUTTON

Press “HEAT” to start the heating mode.

(9) “COOL” BUTTON

Press “COOL” to start the refrigeration mode.

(10) “DRY” BUTTON

Press “DRY” to start the dehumidification mode.


Note: Only when temperature reaches 16°C can we turn on the dehumidification mode, besides, the drain pipe must be installed.

CARE AND MAINTENANCE

WARNING!

Before carrying out any cleaning or maintenance operations, unplug the appliance.

1. Cleaning the air filters

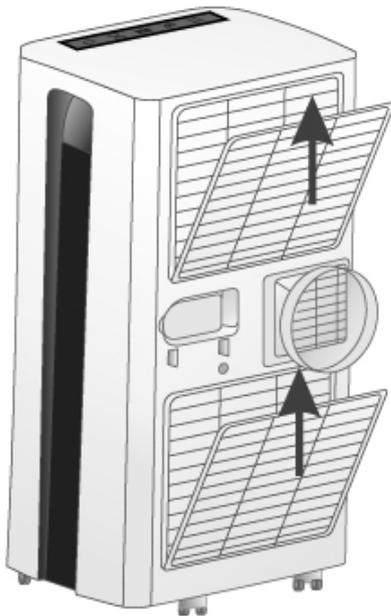


The air filters must be checked at least once every two weeks of use. Operating the appliance with dirty or clogged filters will decrease the air conditioner's efficiency and may cause serious problems.

To remove filter 1, detach the grille by pressing the upper fin.

To remove filter 2, detach the grille by pressing the upper fin.

Use a vacuum cleaner to remove the dust from the filters. Should this not suffice, wash the filter with lukewarm water and some neutral detergent (if necessary), then rinse it thoroughly in cold water and leave it to dry in air before putting it back in place. Once the filter has been replaced, close the grille and resume use of the air conditioner.

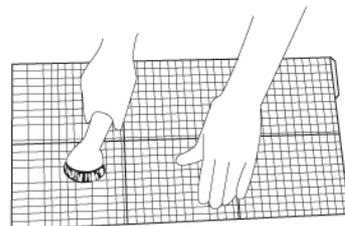


2. Cleaning the casing.

Use a damp and soft cloth to clean the outer surface of the appliance.

Do not use excessively hot water, solvents, petrol or other aggressive chemical compounds, talcum powder or brushes: these may damage the surface or colour of the casing.

Remove any stains using lukewarm water with a little neutral detergent.

Do not pour water onto the air conditioner to clean it, as this may damage its internal components or cause a short-circuit.

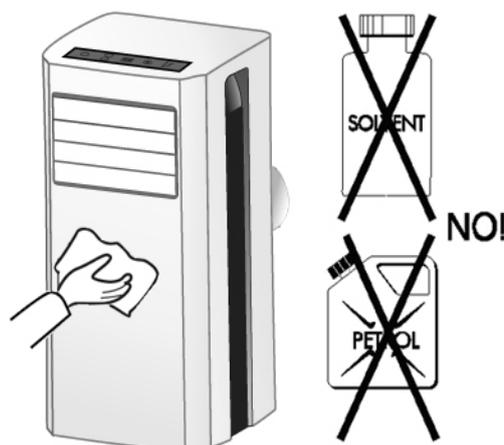

3. Storage.


When you do not expect to use the air conditioner for a long time, clean the filters before storing it away.

Keep the appliance in a vertical position at all times. Do not place heavy objects on top of the air conditioner. It is advisable to protect the appliance with a plastic sheet.

4. Transport.

Where possible, transport the air conditioner in the vertical position.

Should this not be possible, rest it on its right-hand side; when the appliance reaches its final destination, place it immediately in the vertical position and wait at least 4 hours before operating it in cooling mode.

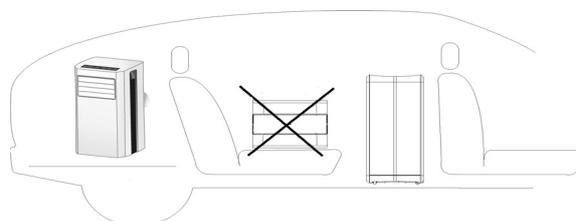

5. For complete safety, regularly check the condition of the power cord; should it be damaged as a result of wear, contact the Service Centre to replace it.

ADVICE FOR MAXIMUM COMFORT AND MINIMUM CONSUMPTION

CHECK that:

- the unit intake and delivery grilles are always free;
- the air filters are always clean; a dirty filter will decrease the passage of air and reduce the unit performance;
- doors and windows are closed, to avoid the infiltration of unconditioned air;
- the flexible pipe is correctly positioned, without tight bends or curves;
- the room temperature is above 18 °C for the cooling mode, and above 10 °C for the dehumidification mode.

REGULATION (EU) No. 517/2014 - F-GAS

The unit contains R410A, a fluorinated greenhouse gas with global warming potential (GWP) = 2087.50. Kg. 0.31 = 0.647 Tonn CO₂ equiv. Do not release R410A into the atmosphere.



INFORMATION FOR THE CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2012/19/EU

This appliance may not be scrapped with domestic waste at the end of its life cycle. We call your attention to the crucial role played by the consumer in the re-use, recycling and other forms of recovery of such waste. The appliance must be scrapped by a sorted waste disposal centre or by returning it to the retailer (no charge is levied for this service), when you purchase a new equivalent appliance.

Sorted disposal of electric and electronic equipment prevents the negative effects on the environment and human health resulting from improper scrapping, and also allows the materials from which it is made to be recovered and recycled, with significant savings in terms of energy and resources.

The sorted disposal requirement is indicated by the crossed waste bin label affixed to the appliance.



improve your life

www.argoclima.com